HOME
DECORATORS
COLLECTION

INV# 74007
SK18210B1 WALKER CORNER WALL CABINET 16"Hx30"Wx30"D

ASSEMBLY INSTRUCTIONS

Made In China

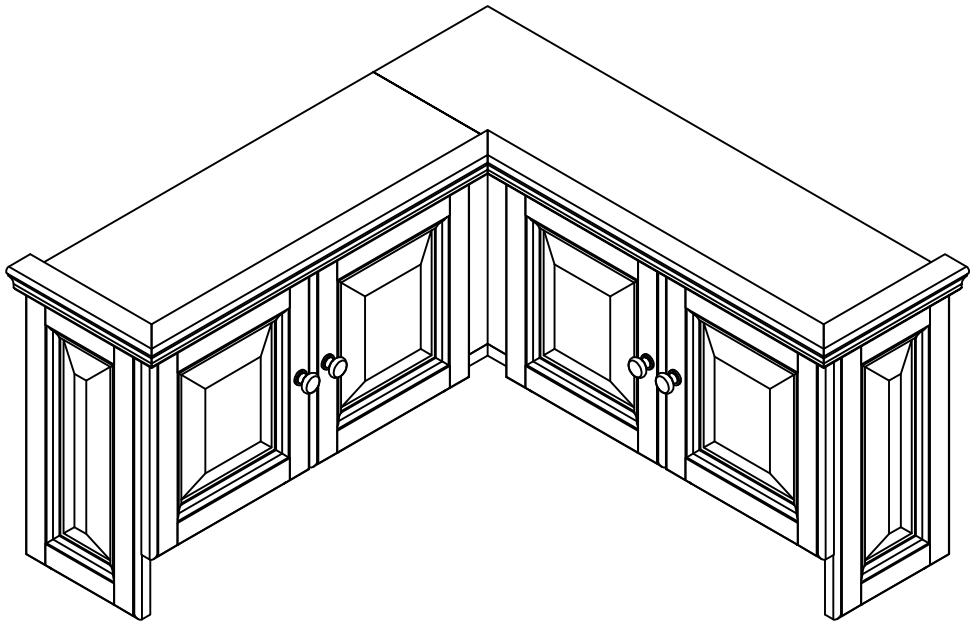

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, please contact our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A 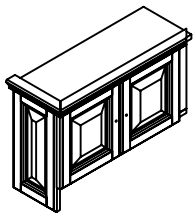 LEFT SIDE CABINET-1PC	B 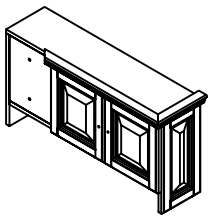 RIGHT SIDE CABINET-1PC	C  LEFT SIDE FRENCH CLEAT-1PC
D 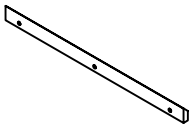 RIGHT SIDE FRENCH CLEAT-1PC		

a  BOLT-2PCS	b  BINDING SCREW-2PCS	c ALLEN WRENCH -2PCS
d  ANCHOR-5PCS	e 2" FLAT HEAD SCREW-5PCS	f 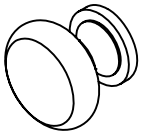 KNOB-4PCS
g KNOB BOLT-4PCS		

NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE

FIG 1

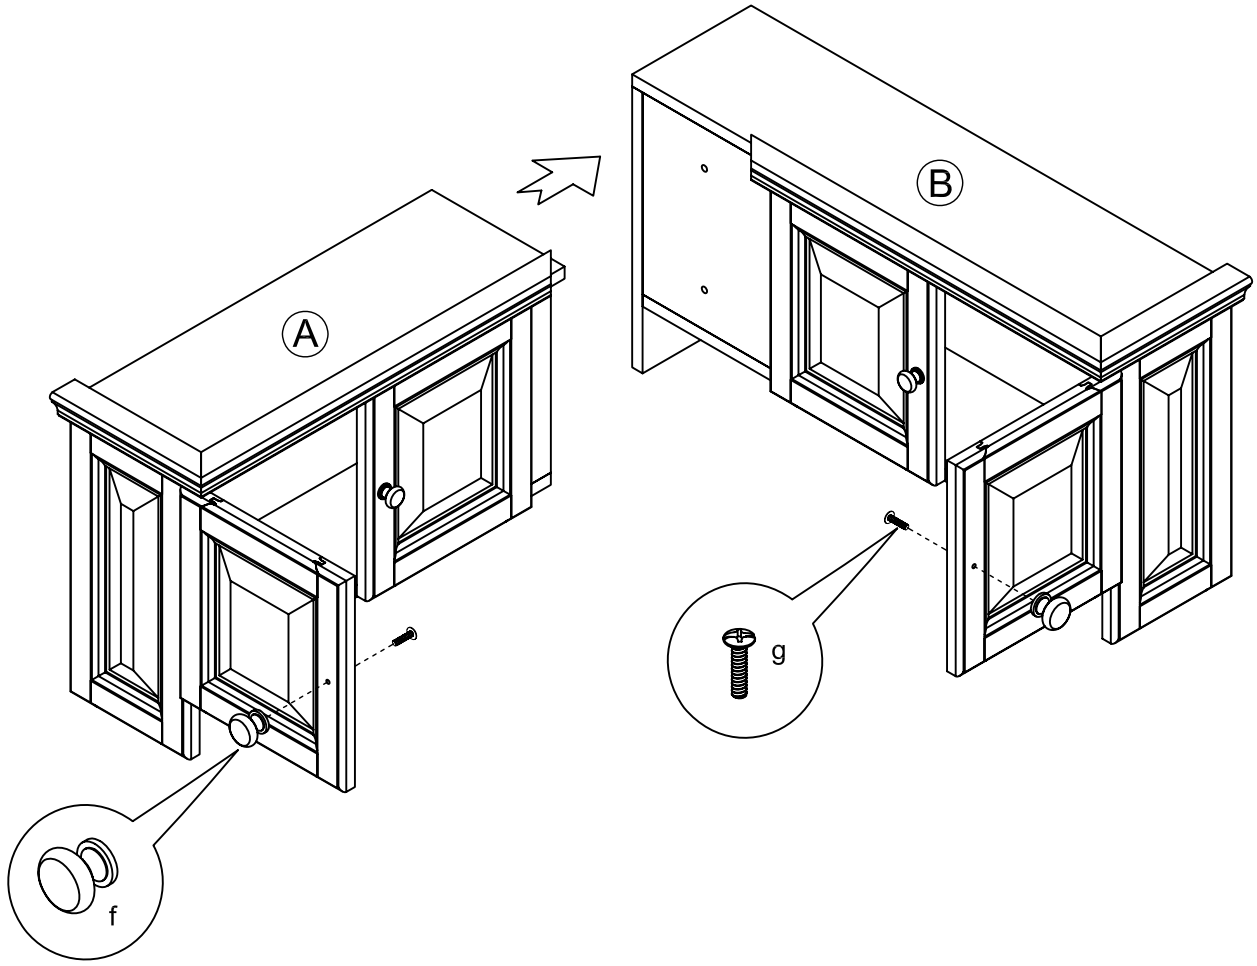

- TIGHTEN THE KNOB (f) ONTO THE DOOR BY USING THE KNOB BOLT (g).
- ATTACH THE LEFT SIDE CABINET (A) TO THE RIGHT SIDE CABINET (B) .

FIG 2

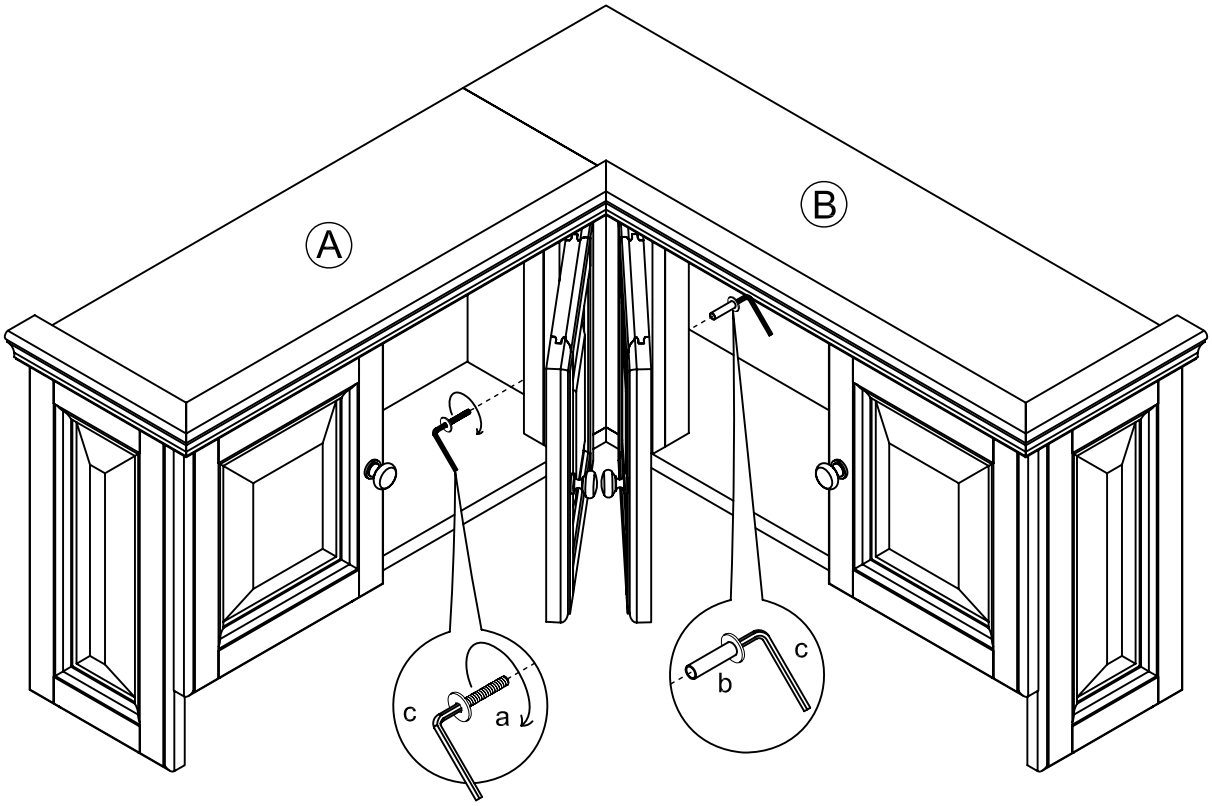

- JOIN THE TWO ASSEMBLED BASE PARTS BY USING BOLT (a) AND THE BINDING SCREW (b) WITH THE ALLEN WRENCH (c).

FIG 3

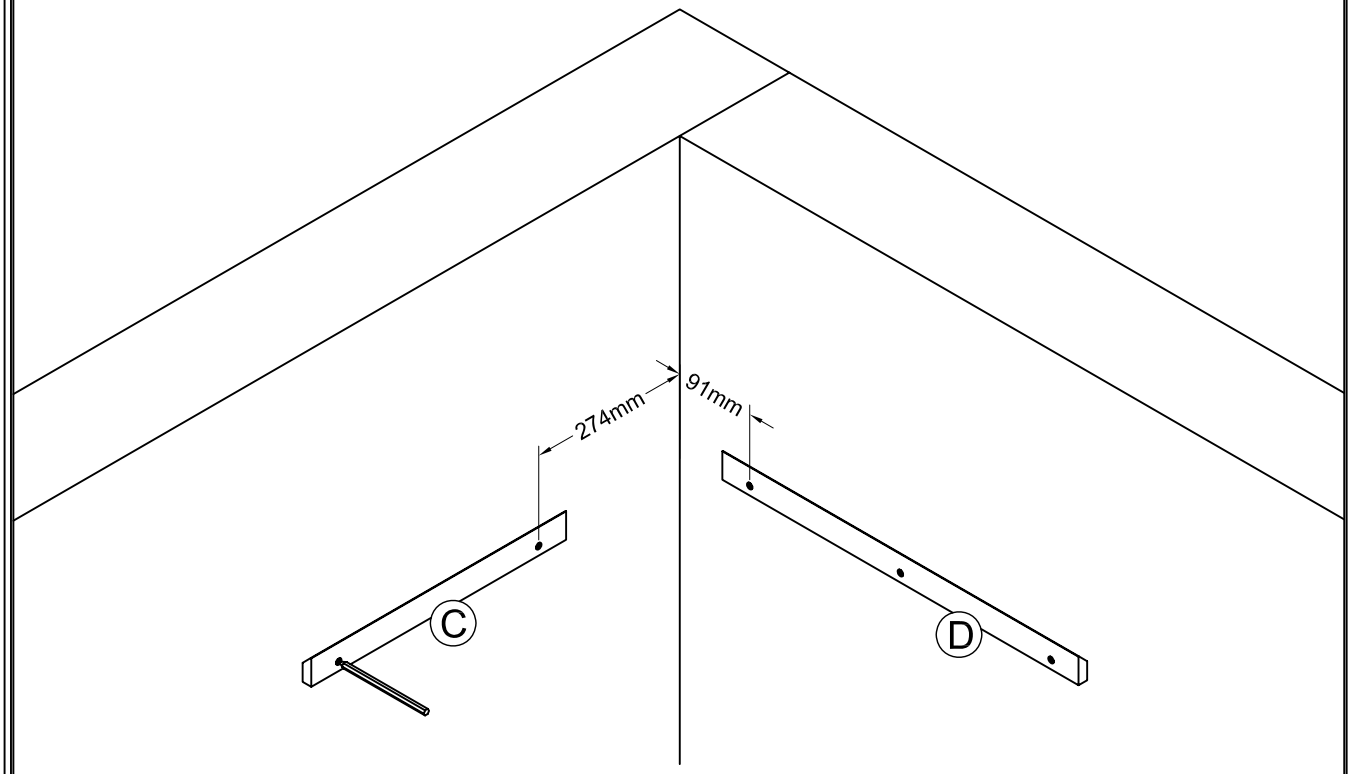

- PLACE FRENCH CLEAT (C&D) ON THE WALL AND USE IT AS A GUIDE TO DETERMINE THE INSERTION POINTS OF THE ANCHOR (d).
- USE A PENCIL (NOT INCLUDED) TO MARK THE WALL THROUGH THE PREDRILLED HOLES OF FRENCH CLEAT (C&D).
- USE A LEVEL (NOT INCLUDED) TO ENSURE CABINET (A&B) WILL BE LEVEL AND PLUMB AGAINST THE WALL.

FIG 4

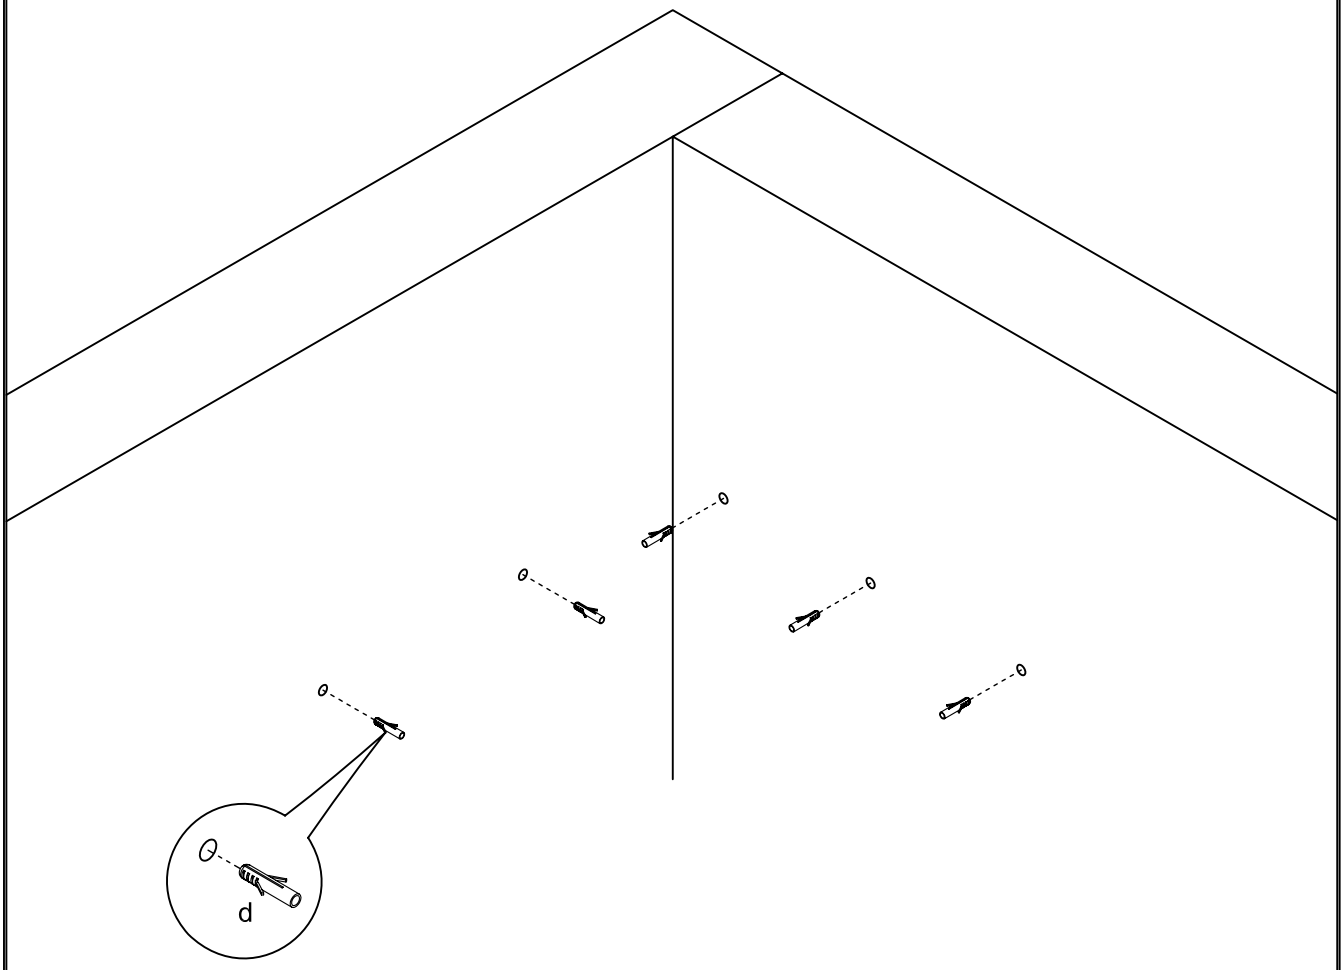

- REMOVE FRENCH CLEAT (C&D) AND SET IT ASIDE.
- USING A 3/16” DRILL BIT (NOT INCLUDED), DRILL HOLES MARKED ON THE WALL.
- PLACE A PHILLIPS SCREWDRIVER (NOT INCLUDED) IN THE RECESSES OF ANCHOR (d).
- SLOWLY TURN ANCHOR (d) CLOCKWISE WITH SLIGHT PRESSURE UNTIL THE FLANGE JUST TOUCHES THE WALL AT EACH PENCIL MARK.
- DO NOT PUSH AGAINST ANCHOR (d) USING A DRILL (NOT INCLUDED).

FIG 5

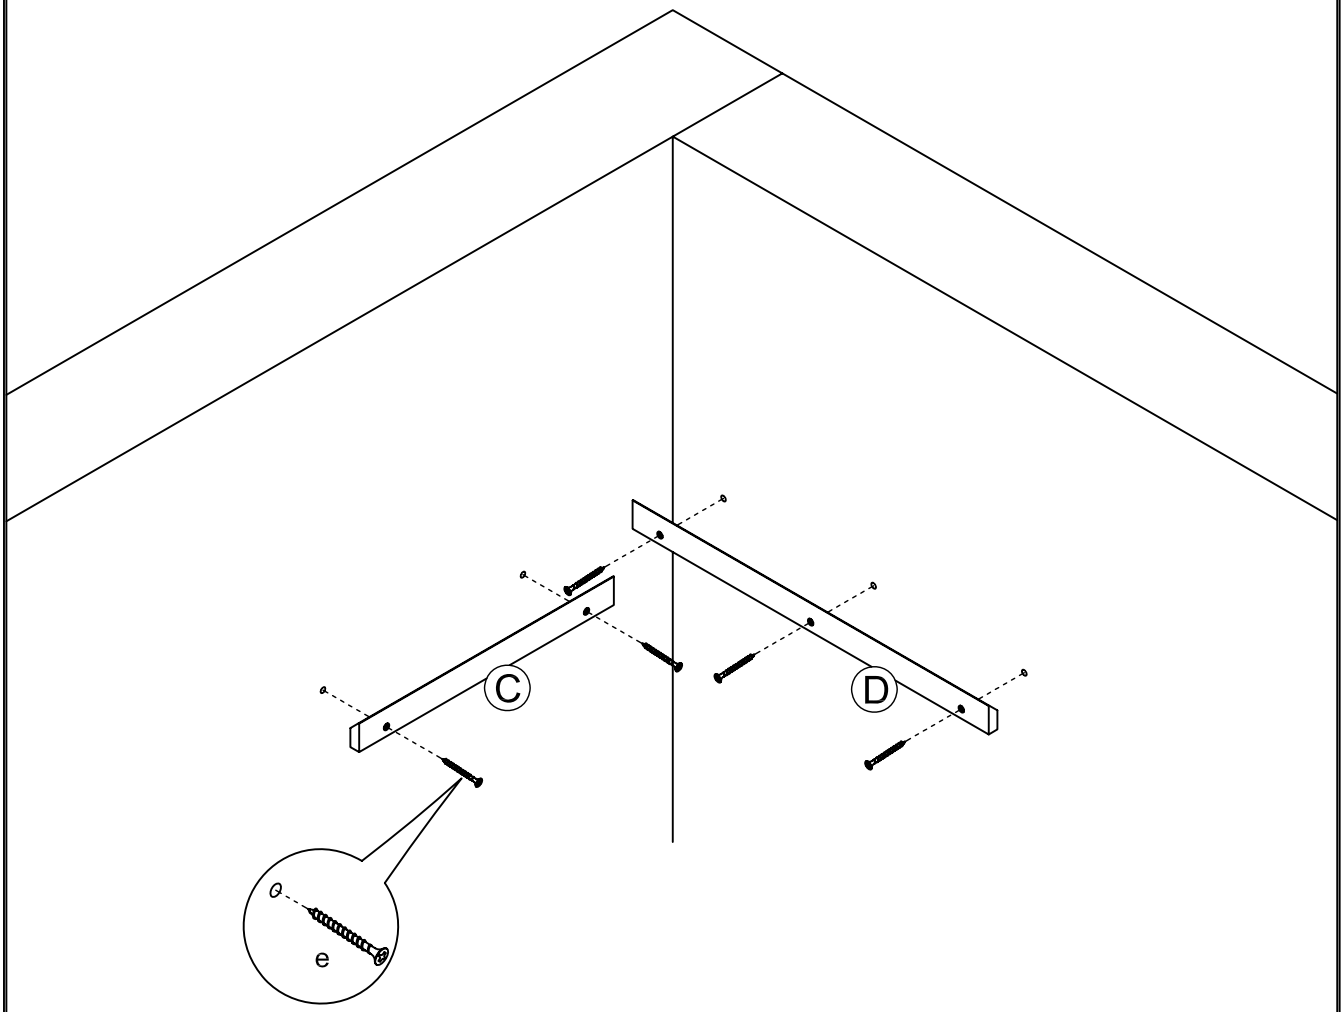

- REPOSITION FRENCH CLEAT (C&D) ON THE WALL WHILE ALIGNING THE HOLES WITH ANCHORS (d).
- INSERT SCREWS (e) THROUGH THE HOLES OF FRENCH CLEAT (C&D) AND TURN CLOCKWISE.
- TIGHTEN SCREWS (e) INTO ANCHORS (d) UNTIL IT BECOMES DIFFICULT TO TURN.

FIG 6

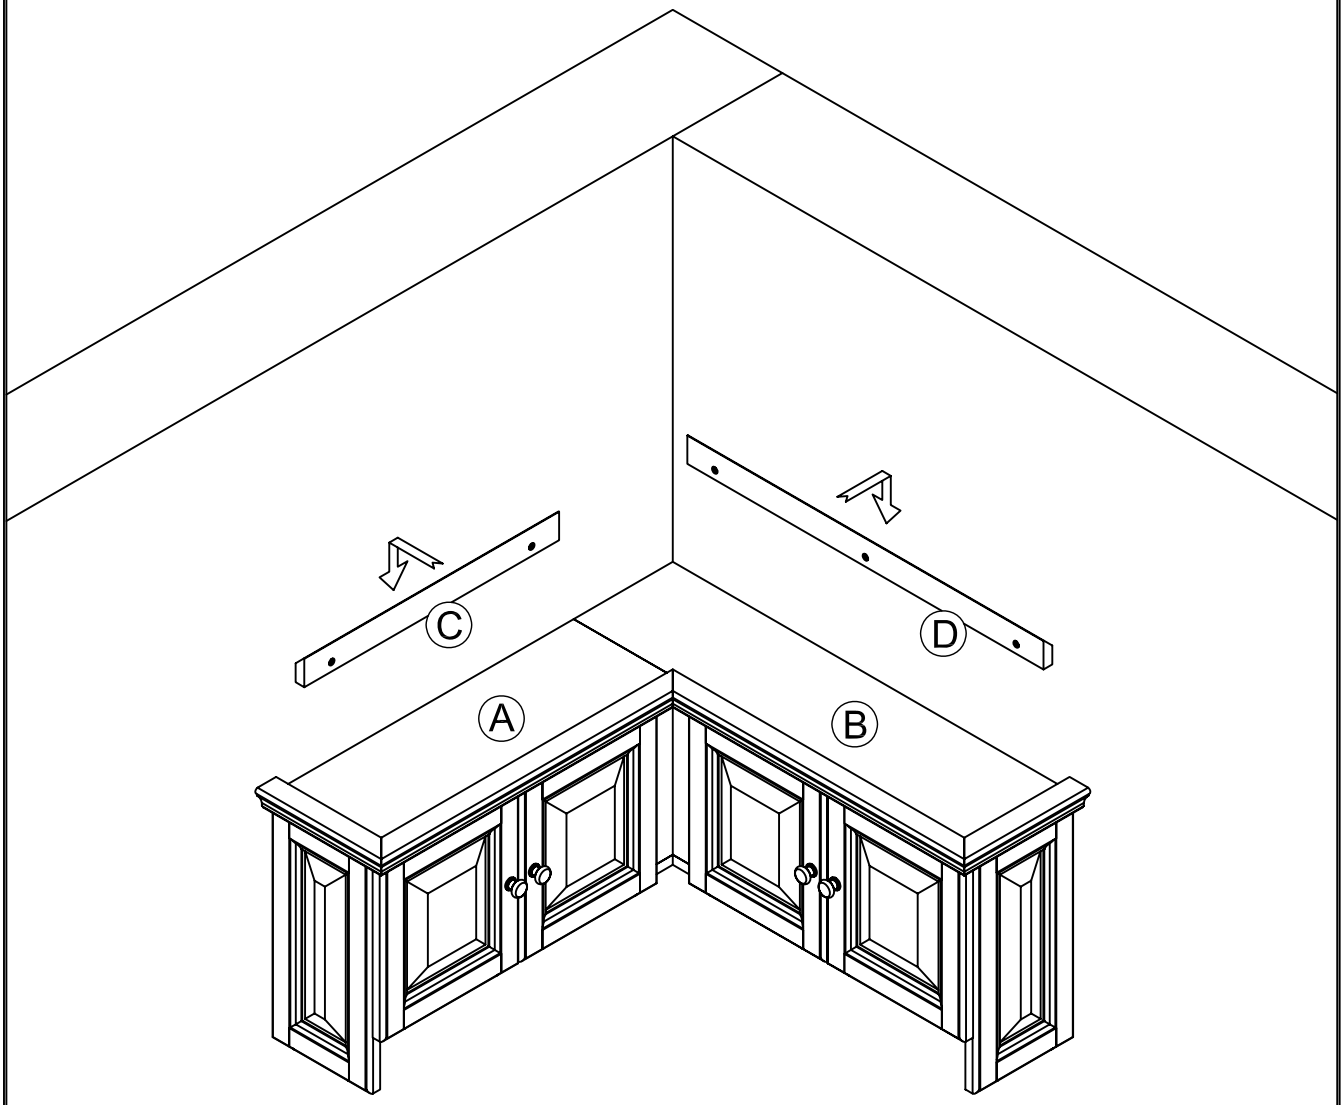

- LIFT THE CABINET SLIGHTLY HIGHER THAN CLEAT. SLOWLY LOWER THE CABINET ONTO THE CLEAT SO IT RESTS ON THE CLEAT AND FLOOR EVENLY.